





ICC-ES EVALUATION REPORT #5045 with CBC-CRC Supplement (Coming 2024 siding only)


ROOF LAP DETAIL

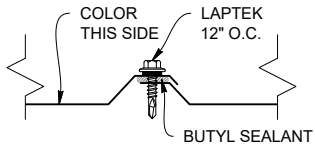


ROOF PROFILE

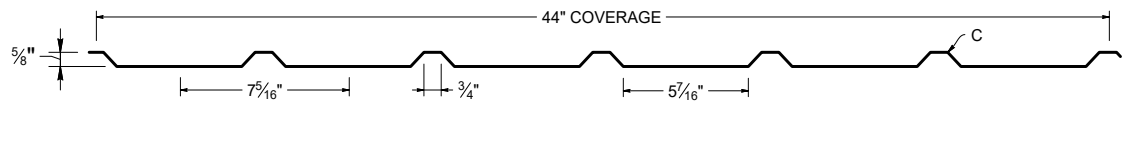

WALL LAP DETAIL

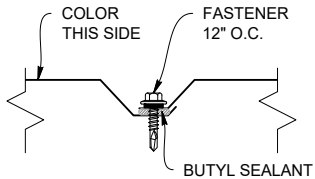


WALL PROFILE

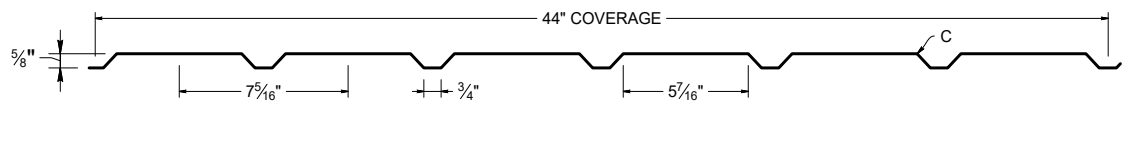

KEY FEATURES

- 24, 22 Tru-Gauge™ and .032" Aluminum
- Custom 20 & 18 Tru-Gauge™ and .040" Aluminum (please inquire)
- 1:12 minimum pitch recommended when installed with butyl sealant
- Custom lengths 2' to 20' 10"
- Standard trim, custom trim and accessory packages available
- Color matched neoprene washered screws
- Roof and Vertical or Horizontal Wall application
- Manufactured in Salem OR, Sacramento CA, and Riverside CA
- OverEZee™ Retro-fit systems available

TESTING


-  ICC-ESR #5045 with CBC-CRC Supplement (Coming 2024 siding only)
- ASTM E1680 - Air infiltration (roof)
- ASTM E1646 - Water infiltration (roof)
- ASTM E1592 - Structural uniform static air pressure (Coming 2024 siding only)
- ASTM E331 - Water infiltration (wall)
- ASTM E283 - Air infiltration (wall)
- ASTM A653/A924 - G90 Galvanized
- ASTM A792 - Zincalume/Galvalume AZ-50/55
- ASTM B209 - Aluminum Substrate

WEIGHT CHART


| TMP .625-7.33-44 | WIDTH | 24 GA STEEL | 22 GA STEEL | .032 ALUM | .040 ALUM |
|------------------|-------|-------------|-------------|-----------|-----------|
| THICKNESS | | 0.0236" | 0.0285" | 0.032" | 0.040" |
| WEIGHT/LINFT | 44" | 3.851 LBS. | 4.651 LBS | 1.825 LBS | 2.281 LBS |
| WEIGHT/LSQFT | 44" | 1.050 LBS | 1.268 LBS | 0.498 LBS | 0.622 LBS |

| ASTM E 1680/E283 Air Penetration | ASTM E 1646/E331 Water Penetration |
|--|---------------------------------------|
| 25 PSF < 0.01 CFM/ft ² - PASS | 50 PSF - PASS |

PANEL ATTACHMENT

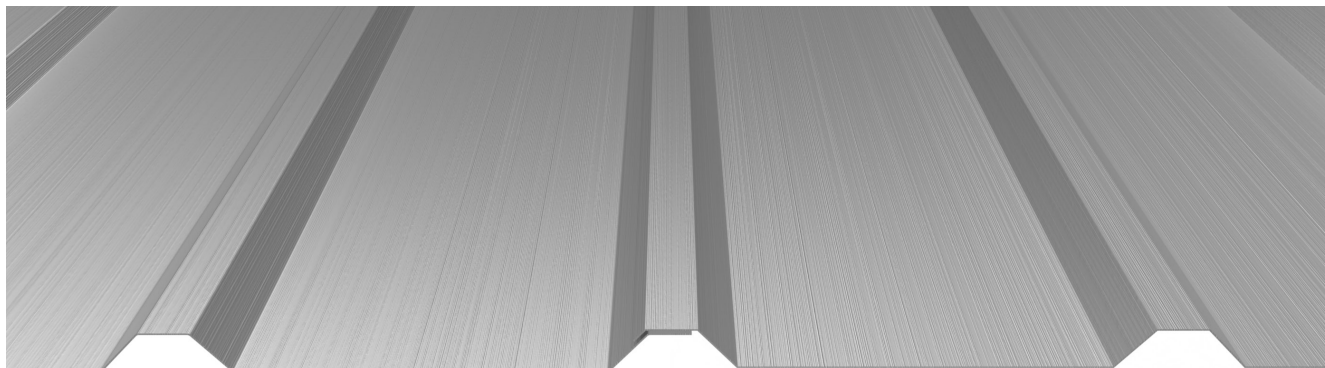

FASTENER DIAGRAM

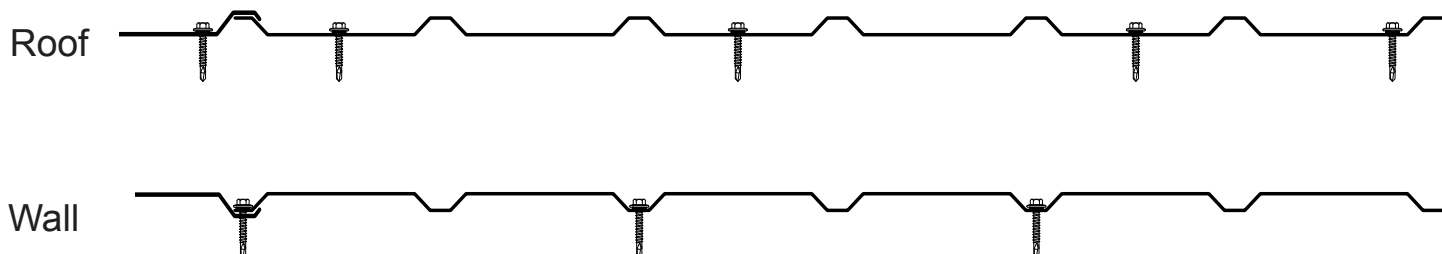

Fastener Notes:

- When possible, lap panels away from prevailing wind direction.
- 15/32" OSB: #14 GP Neoprene Washered fastener. Screws should be long enough to penetrate through the bottom of the plywood by 3/8".
- 15/32" Plywood: #14 GP Neoprene Washered fastener. Screws should be long enough to penetrate through the bottom of the plywood by 3/8".
- Dimensional lumber: #10 GP. Screws should penetrate the lumber 1".
- 16GA (or less) steel furring: #12 Fastener with DP-1
- Sidelaps fasten with #14 LapTek screws.
- All trim screws used for roof or wall applications should have EPDM sealing washers.
- Fastener spacing is based on project specific structural requirements. Consult a licensed engineer.